


Steel cable + suspended ceiling attachment

1

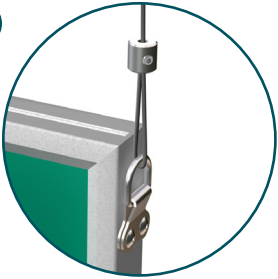

Feed cable through the hanging ring, ensuring the collar is above the ring at this stage, and then insert the looped end into the collar. The loop can now be secured via the collar grub screw.

2



Simply position the ceiling grid clip in the desired location, twist and lock in place onto the ceiling grid.

3



Locate disc cover over the ceiling grid clip, securing in position by threading the cable clamp onto the ceiling grid clip. Feed cable into clamp through the entrance boss, cable adjustment can be made by pressing the entrance boss.



Product code: Hanging Kit 2

*Contents: 1m Steel wire x 2
Nickel plated collar x 2
Nickel plated cable clamp x 2
Nickel plated disk cover x 2
Ceiling grid clip x 2*

